

# detLFS - Getting started

Thomas Dettbarn dettus@dettus.net

May 25, 2020

Copyright (c) 2020, Thomas Dettbarn All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this
  list of conditions and the following disclaimer.
   Redistributions in binary form must reproduce the above copyright notice,
  this list of conditions and the following disclaimer in the documentation
  and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

# **Contents**

1	Intro	Introduction 5					
	1.1	Nome	enclature	5			
2	Buile	ilding a system					
	2.1	Prerec	quisites	8			
	2.2	Clear	nup after build	8			
	2.3	Pre-build configuration					
		2.3.1	The hostname	8			
		2.3.2	Changing to a UART console	9			
		2.3.3	The boot logo	9			
		2.3.4	Kernel and busybox configuration	9			
		2.3.5	Network, System time etc	10			
	2.4	Prepo	aring the SD card	10			
	2.5	Curre	nt packages	12			
3	The	he build process explained 13					
	3.1	The sc	cripts	13			
		3.1.1	0_getit.sh	13			
		3.1.2	1_buildtools.sh	13			
		3.1.3	2_basesystem.sh	14			
		3.1.4	3a_comppackages.sh	14			
		3.1.5	3b_ownpackages.sh	14			
		3.1.6	4_mksdcard.sh	14			
	3.2	The di	irectorys	15			
		3.2.1	Downloads/	15			
		3.2.2	Sources/	15			
		3.2.3	Build/	15			
		3.2.4	Tools/	15			
		3.2.5	Destination/	15			
		3.2.6	Mnt/				

4 CONTENTS

4	4 Using your system						
	4.1	The init scripts	17				
	4.2	Changing the root password	17				
5	Rep	Repeater project					
	5.1	Layout	19				
	5.2	Compiling the software	20				
	5.3	Configuration files	20				

# Introduction

Hello. Welcome. Thank you for your interest in the system builder <code>detlfs</code>. I started this project, because I had a Raspberry Pi lying around, and I had to do something very specific to it at work. The distribution images offered by the raspberrypi.org homepage where good, but not what I was looking for. Other system builders like crosstool-ng, buildroot or Yocto seemed popular, but quite exhaustive. I was looking for something smaller. Something everybody could understand and modify. So, out of my stubborness, <code>detlfs</code> was born. Its goal is to provide the advanced Raspberry Pi user with a minimalistic set of scripts to build their very own Linux system. Including a Kernel, busybox as a shell replacement and a working GCC, which is always a tedious process.

At its core is a selection of shell scripts, which are less than 150 lines long, and pretty straight forward. There are no conditions in them, no loops, just pure and utter commands. One after the other. Understanding what the scripts do is thus not only easy, but also imperative. If you have not done so, just look at them. They are going to be explained in greater detail in chapter 3.1.

#### 1.1 Nomenclature

**Host system** The scripts will require to be run on a Desktop PC. This is the host. So far, only Ubuntu 14.04 and 16.04 have been used for this, building everything under OpenBSD failed.

**Target system** This will be the Raspberry Pi, albeit only because of the Kernel which is downloaded via git and the bootloader. In theory, the scripts can be expanded to include other eval boards.

# Building a system

Building a system is as easy as 1, 2, 3a, 3b. It can be downloaded and unpacked on the commandline:

```
% wget http://www.dettus.net/detLFS/detLFS_0.07.tar.bz2
% tar xvfj detLFS_0.07.tar.bz2
% cd detLFS 0.07
% ls
0 getit.sh
                   4 mksdcard.sh
                                    logo/
                 bsd_twoclause.txt readme.txt
1_buildtools.sh
2_basesystem.sh
                 config_busybox
                                    runall.sh
3a_comppackages.sh config_kernel
                                     skeldir/
3b ownpackages.sh
                   helloworld.c
```

Note that all the files in here start with either a number or a lower case letter. This is because generated files and directories will start with upper case letters. After running the scripts, the directory looks like this:

```
% sh 0_getit.sh
                        #download the packages
% sh 1 buildtools.sh
                        #build the cross compiler
% sh 2 basesystem.sh
                        #for a minimalistic system
% sh 3a_comppackages.sh #build the compilers
% sh 3b_ownpackages.sh #build your own packages
% sudo sh 4 mksdcard.sh #HAZARDOUS
% 1s
0 getit.sh
                   Build/
                                  Helloworld_shared.app
1_buildtools.sh
                 config_busybox Helloworld_static.app
2_basesystem.sh config_kernel
                                  readme.txt
3a_comppackages.sh Destination/
                                  runall.sh
3b_ownpackages.sh Downloads/
                                  skeldir/
                                 Sources/
4 mksdcard.sh
               helloworld.c
bsd_twoclause.txt logo/
                                  Tools/
Mnt/
```

Which will take approximately three hours. 4\_mksdcard.sh will not run out of the box, it needs a handful of changes. It is also the one that needs root priviledges and is therefore DANGEROUS.

Once the system has been build and copied onto an SD card, you can use it. See chapter 4 for that.

## 2.1 Prerequisites

The build system was tested successfully on Ubuntu 14.04, Ubuntu 16.04 and 18.04. The requirements are quite moderate: gcc-4.8.4 was installed, gawk, git, openssl-dev, as well as Imagemagick and netpbm. Among the usual suspects were make, tar, gzip, bzip2 and xz. Not even a working cross compiler is needed, the scripts can build everything they need. Even though they are small, running them results in at least 11 Gigabytes of downloaded sources and binaries. The final system is either 64 Mbyte or 1.3 GBytes large. Depending on how many scripts were running. You will need to have an SD card that size. As well as a Raspberry Pi to run everything on.

# 2.2 Cleanup after build

After the system has been build, only Destination/ needs to be saved. The directories Build/, Downloads/, Mnt/, Sources/ and Tools/ can go:

```
% rm -rf Build Downloads Mnt Sources Tools
% rm -rf Destination # if you want
```

# 2.3 Pre-build configuration

Before you want to build your system, you have to make up your mind what you want to have in it. I needed something to run on a Raspberry Pi2 with a Touchscreen attached to it and a keyboard. And I wanted to have a fancy and colourful bootlogo, as well as a root user.

For this, the directories <code>skeldir/</code> and <code>logo/</code> are important, as well as the two files <code>config\_busybox</code> and <code>config\_kernel</code>.

#### 2.3.1 The hostname

The hostname can be changed simply by typing

```
% cat skeldir/etc/hostname
detlfs
% echo "newhostname" >skeldir/etc/hostname
```

9

## 2.3.2 Changing to a UART console

Since my machine was connected directly to a monitor, I did not need the serial port. This is reflected by the <code>cmdline.txt</code> in <code>skeldir/boot/</code>:

```
% cat skeldir/boot/cmdline.txt
dwc_otg.lpm_enable=0 console=tty1 root=/dev/mmcblk0p2
rootfstype=ext4 elevator=deadline fsck.repair=yes
init=/sbin/init rootwait
```

Note that this is a single line. Change this to

```
% cat skeldir/boot/cmdline.txt
dwc_otg.lpm_enable=0 console=ttyAMA0,115200
root=/dev/mmcblk0p2 rootfstype=ext4 elevator=deadline
fsck.repair=yes init=/sbin/init rootwait
```

That SHOULD DO THE TRICK. I HAVE NOT TRIED IT OUT YET! (sorry)

### 2.3.3 The boot logo

When the system is booting, it is displaying a nice little logo. For this, basically any picture with 80x80 pixels and no more than 224 colours can be used. Just overwrite the mylogo.xpm in logo/:

```
% convert WHATEVER.png -scale \!80x80 logo/mylogo.xpm.
```

It will be converted into its final format during the run of 1 buildtools.sh.

### 2.3.4 Kernel and busybox configuration

Configuration of the kernel and for busybox can be performed by editing the <code>config\_kernel</code> and <code>config\_busybox</code>. Those files have been configured to work with my Raspberry, and the <code>2\_basesystem.sh</code> will use them during its run. If you prefer to have a menu driven interface, and are not bothered by the sudden user interaction, please edit it. The following lines

```
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
## configuration of the kernel can be done by choosing on
cat $DETLFSROOT/config_kernel | sed -e 's?CONFIG_CROSS_CO
#vimdiff .config $DETLFSROOT/config_kernel
#make ARCH=arm menuconfig
### pick one!
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
...
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
## configuration of busybox can be done by choosing one o
cat $DETLFSROOT/config_busybox | sed -e 's?CONFIG_CROSS_C
#vimdiff .config ../../../config_busybox
#make ARCH=arm menuconfig
### pick one!
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
```

#### should become

```
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
## configuration of the kernel can be done by choosing on
#cat $DETLFSROOT/config_kernel | sed -e 's?CONFIG_CROSS_C
#vimdiff .config $DETLFSROOT/config_kernel
make ARCH=arm menuconfig
### pick one!
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
...
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
## configuration of busybox can be done by choosing one o
#cat $DETLFSROOT/config_busybox | sed -e 's?CONFIG_CROSS_
#vimdiff .config ./../../config_busybox
make ARCH=arm menuconfig
### pick one!
make ARCH=arm CROSS_COMPILE=$TOOLSDIR/bin/arm-linux-gnuea
```

#### 2.3.5 Network, System time etc.

See chapter 5 for an example project that requires networks access.

# 2.4 Preparing the SD card

If you have tried running 4\_mksdcard.sh earlier, you might have noticed that it refused to run at all. This is because it contains a line

```
echo "aborting now."; exit ## COMMENT THIS ONE OUT ONC
```

As the line says, it can be commented out once the script has been understood. Just plug in an SD card into your computer, and use dmesg to figure out which device it is.

```
% dmesg
[950012.353484] sd 11:0:0:2: [sdh] 31116288 512-byte logi
[950012.354814] sd 11:0:0:2: [sdh] No Caching mode page f
[950012.354819] sd 11:0:0:2: [sdh] Assuming drive cache:
[950012.356714] sd 11:0:0:2: [sdh] No Caching mode page f
[950012.356715] sd 11:0:0:2: [sdh] Assuming drive cache:
[950012.361979] sdh: sdh1 sdh2
```

On my computer, it was /dev/sdh. So edit 4\_mksdcard.sh, ESPECIALLY the line where MMCCARD is being set:

```
export MMCCARD="/dev/sdf"
```

into /dev/sdh. Or /dev/mmcblk0 or something. Not /dev/mmcblk0p1. Not /dev/sdh2. Once you have done that AND YOU ARE SURE, comment out the exit:

```
# echo "aborting now." ; exit ## COMMENT THIS ONE OUT ON
```

Then you can run the script, and partition the SD card.

```
% sudo sh 4_mksdcard.sh
Command (m for help): n
Partition type:
      primary (0 primary, 0 extended, 4 free)
      extended
Select (default p): p
Partition number (1-4, default 1): 1
First sector (2048-31116287, default 2048): 2048
Using default value 2048
Last sector, +sectors or +size{K,M,G}: +16M
Command (m for help): n
Partition type:
      primary (1 primary, 0 extended, 3 free)
      extended
Select (default p): p
Partition number (1-4, default 2): 2
First sector (34816-31116287, default 34816): 34816
Using default value 34816
Last sector, +sectors or +size{K,M,G}: +1024M
Command (m for help): t
Partition number (1-4): 1
Hex code (type L to list codes): c
Changed system type of partition 1 to c (W95 FAT32 (LBA))
Command (m for help): p
  Device Boot Start
                          End Blocks Id System
/dev/sdh1
                 2048
                        34815
                                16384 c W95 FAT32 (LBA)
/dev/sdh2
                34816 2131967 1048576 83 Linux
Command (m for help): w
```

The type for partition one is important. If it is set to anything other than Id=c, your Raspberry will not boot.

After this brief user interaction, the SD card should be finished and bootable. Try it out now!

## 2.5 Current packages

At the moment of writing this document, the versions of the packages were

- binutils-2.32
- busybox-1.31.1, patched to compile tls aesgcm.c
- gcc-8.3.0
- glibc-2.29
- gmp-6.1.2
- iptables-1.8.4
- linux 4.4.15, raspberry pi extensions
   4eda74f2dfcc8875482575c79471bde6766de3ad
- libnl-3,2,25
- libmnl-1.0.4
- libnftnl-1.1.6
- make-4.2.1, patched to circumvent a missing call to \_\_alloca
- mpc-1.1.0
- mpfr-4.0.2
- openssl-1.1.1g
- wireless tools 29
- wpa supplicant 2.9

The latest version can always be downloaded by editing <code>0\_getit.sh</code>.

# The build process explained

Most of the packages are using the autoconf system to build. This offers a configure script, which is generating a Makefile. The build can be performed in a directory other than the sources, which is why the Build/ is being created.

## 3.1 The scripts

When opening the scripts in a text editor, it becomes obvious that instructions for a specific packet are being grouped within brackets.

#### **3.1.1** 0 getit.sh

The purpose of this script is to download the packages needed for the target linux, as well as the sources for the cross compiler. Its mode of operation is that it is using wget to download tarballs from their respective servers. Those are placed in the <code>Downloads/</code> directory, and are later extracted into the <code>Sources/</code> directory.

To ease the design of later scripts, the version number is then removed by renaming the extracted directory. The Linux Kernel is downloaded via git. This is because it is expected that the Raspberry Pi's kernel fork includes some specific patches, hence using their repository. To make sure that the config provided by detLFS matches the kernel, a specific revision is chosen.

After the script's completion, no more internet connection is needed.

### 3.1.2 1 buildtools.sh

This script is building the cross compiler. Building the cross compiler requires not only the kernel headers, but also the glibc. Which, in turn, requires a working cross compiler. To until this knot of truely Gordian

proportions, the glibc is in fact being referenced 4 times in this file, the gcc twice. It starts off by performing a build which is ignoring errors, (with make -k). This will do nothing more than to install the headers into the appropriate locations. The first gcc build will create an executable which is installed into the Tools/ directory, and can be used to properly build and install the glibc. Afterwards the gcc is build again, this time with the glibc.

The cross compiler is tested by compiling the helloworld.c file, once as Helloworld\_shared.app and Helloworld\_static.app.

#### **3.1.3** 2\_basesystem.sh

This script is creating the base system, consisting of the Kernel and Busybox. Both builds offer the opportunity to configure them menu-based. Since this requires user interaction, which is breaking the scripted aspect, two predefined configuration files are used. In case user configuration is required, the script can easily be changed by commenting in the make menuconfig line. See chapter 2.3.4 for that.

The script starts by converting the logo/mylogo.xpm into the format which is needed so that it can be shown during the boot process. Then, the Kernel and the modules are being build, and copied into the <code>Destination/directory</code>. The same goes for busybox. Once the build has been finished, the <code>skeldir/</code> is being copied.

This concludes the build of a bootable Linux system for the Raspberry Pi.

#### **3.1.4** 3a\_comppackages.sh

This script is building the compiler packages which can run natively on the Raspberry Pi. It is using the already created cross compiler under <code>Tools/</code> for this. Which is why this script is more straight forward than <code>l\_buildtools.sh</code>. Running this script is optional.

#### **3.1.5** 3b\_ownpackages.sh

This script's purpose is to provide an example to show how to extend the build process. It is setting up the environmental variables and performing the build of the make program again. Adding a new package can be done by using this a template.

#### **3.1.6** 4 mksdcard.sh

This script will create the final folder Mnt/. It is dangerous, since it needs to be run with root priviledge. Please see chapter 2.4 before running it.

15

#### 3.2 The directorys

### 3.2.1 Downloads/

This directory holds the packages which have been downloaded from the internet.

### 3.2.2 Sources/

This directory contains the extracted sources from the packages. The version numbers have been removed, to make the build scripts easier to understand.

#### **3.2.3** Build/

This directoy contains object files and binaries, as well as the temporary files during the build.

#### **3.2.4** Tools/

This directoy contains the cross compiler.

#### **3.2.5** Destination/

This directory will become the root filesystem on the Raspberry.

#### **3.2.6** Mnt/

This is where the SD Card will be mounted.

# Using your system

The login is root, the password is root as well.

# 4.1 The init scripts

If you look at the skeldir/etc/directory, you will notice two files: inittab and rcs.

```
% cat skeldir/etc/inittab
null::sysinit:/bin/mount -t proc proc /proc
null::sysinit:/bin/mount -o remount,rw /
null::sysinit:/bin/mkdir -p /dev/pts
null::sysinit:/bin/mkdir -p /dev/shm
null::sysinit:/bin/mount -a
null::sysinit:/bin/hostname -F /etc/hostname
::sysinit:/etc/rcS
tty1::respawn:/sbin/getty -L tty1 115200 vt100
tty2::respawn:/sbin/getty -L tty2 115200 vt100
::ctrlaltdel:/sbin/reboot
% cat skeldir/etc/rcS
#!/bin/ash
echo "hello world"
```

Busybox, in its role as init-replacement, is reading from inittab, which is creating a new login on console tty1 and tty2. It is also starting the script /etc/rcs at system init time, which is nothing more than a "hello world" example at this point.

# 4.2 Changing the root password

The way I created the password hash, which can be found on the host in skeldir/etc/shadow, was by using perl's crypt() function:

```
% perl -e 'printf("%s\n", crypt("root",".1"));'
.lsr3K17ExsXU
```

The first parameter is the password, the second one is the salt. Changing the password to "abcde", for example, can be done like this:

```
% perl -e 'printf("%s\n", crypt("abcde","11"));'
11BYYrrX5tm1k
% perl -e 'printf("%s\n", crypt("abcde","12"));'
12yYR42qdsGFc
```

One of those needs to be copied into skeldir/etc/shadow instead of .lsr3K17ExsXU. After building the system, the new password will be "abcde". Obviously, it could be changed on the target as well.

# Repeater project

One day I had a problem that I needed a WiFi Repeater. I bought myself an USB-WiFi adapter and dug up an old access point.

## 5.1 Layout

A WiFi repeater connects itself to an exising WiFi, in the following example one with the name Hello. It will create and open up a new WiFi Network with a new SSID, in this example one bearing the name WORLD. For this, the Raspberry acts as a gateway between two network devices: A USB WiFi dongle connects to the pre-existing WiFi Hello. At the same time, an access point for the WiFi WORLD is being connected via the ethernet link.

Assuming that the Hello is using the subnet 192.168.1.0/24, the new subnet could be 192.168.2.0/24.

```
SSID 1 "Hello"

existing WiFi Repeater wlan0

192.168.1.1 <---> 192.168.1.100

192.168.2.9 <---> 192.168.2.0/24

Repeater eth0 Access point

SSID 2 "World"
```

It is **important** that the repeater will be given a STATIC IP address, in this example 192.168.1.100 was chosen. (Note the 192.168.2.9 address for the repeater. A little security by obscurity!)

The Raspberry will act as the access router and DHCP server for the network WORLD. The new Access point needs to be pre-configured with the SSID WORLD and a WPA2 key.

In my case, I bought a USB WiFi device which used the RTL8192CU kernel module. (I figured this out by plugging it into my Laptop and comparing the outputs of Ismod before and after.) At the time I am writing this, I am having issues with this device. It seems to disconnect and reconnect from my main WiFi at regular intervals.

## 5.2 Compiling the software

Once the system has been build with the commands described in chapter 2, and before running the HAZARDOUS mksdcard script, running the two extra scripts

```
% sh 3c_morepackages.sh
% sh 3d_repeater.sh
```

builds the networking tools and installs them in the Destination/folder.

## 5.3 Configuration files

The following configuration files need to be added to the Destination folder:

- Destination/etc/udhcpd.conf
- Destination/etc/wpa\_supplicant.conf
- Destination/etc/rcS

The repeater needs to provide a DHCPD server. Busybox can be tasked to do so. The file <code>Destination/etc/udhcpd.conf</code> needs to contain:

```
start 192.168.2.20
end 192.168.2.30
lease_file /var/run/udhcpd.leases
interface eth0
max_leases 11
opt dns 8.8.8.8
option subnet 255.255.255.0
option router 192.168.2.9
option domain deep.space
option lease 3600
```

To enable encrypted communication with the pre-existing access point, the file <code>Destination/etc/wpa\_supplicant.conf</code> needs to start with this content:

```
ctrl_interface=DIR=/var/run/wpa_supplicant
update_config=1
country=DE
```

Afterwards, the following command can be used to generate a hashed password:

```
% wpa_passphrase SSID1 PASSWORD \
    >>Destination/etc/wpa_supplicant.conf
```

Note that SSID1 in this case was HELLO.

21

Finally, the startup script <code>Destination/etc/rcs</code> file needs to set up the WiFi device (in this case a rtl8192cu), the network devices, and the NAT itself.

```
#!/bin/ash
echo "hello world"
echo "-----
mkdir -p /sys
mount -t sysfs sysfs /sys
mkdir -p /var/run
mount -t tmpfs -o size=64M tmpfs /var/run
ln -s -f /var/run /
modprobe rt18192cu
rmmod rt18192cu
modprobe rtl8192cu
sleep 5
/usr/sbin/wpa_supplicant -i wlan0 -c \
                         /etc/wpa_supplicant.conf &
sleep 5
ip address add 127.0.0.1/8 dev lo
ip link set lo up
ip route add 127.0.0.0/8 dev lo
ip address add 192.168.2.9/24 dev eth0
ip link set eth0 up
route add 192.168.2.0/24 dev eth0
ip address add 192.168.1.100/24 dev wlan0
#ip address add 192.168.1.100/24 dev wlan0 scope link
ip route add default via 192.168.1.1
touch /var/run/udhcpd.leases
udhcpd /etc/udhcpd.conf
echo "1" >/proc/sys/net/ipv4/ip_forward
iptables -t nat -A POSTROUTING -o wlan0 -j MASQUERADE
iptables -A FORWARD -p tcp --tcp-flags SYN, RST SYN \
     -j TCPMSS --set-mss 1400
iptables -A FORWARD -i wlan0 -o eth0 -m state \
    --state RELATED, ESTABLISHED - j ACCEPT
iptables -A INPUT -i wlan0 -m state \
     --state RELATED, ESTABLISHED -j ACCEPT
mount -o ro, remount /
```

#### Once the files have been edited, running

```
% sudo sh 4_mksdcard.sh #HAZARDOUS
```

as usual writes the files to an sdcard.